


## NAVODILA ZA NAMESTITEV WIFI TISKLANIKA RP820

Gonilnike se pridobi tukaj <https://dl.eblagajna.com/misc/RP820/>

Nato zaženeš PrinterTool in izbereš USB priklon (tukaj se priklopi na tiskalnik).


Nato greš na zavihek Ethernet in nastaviš lokalni IP za ta tiskalnik in klikneš na SET (slika spodaj)

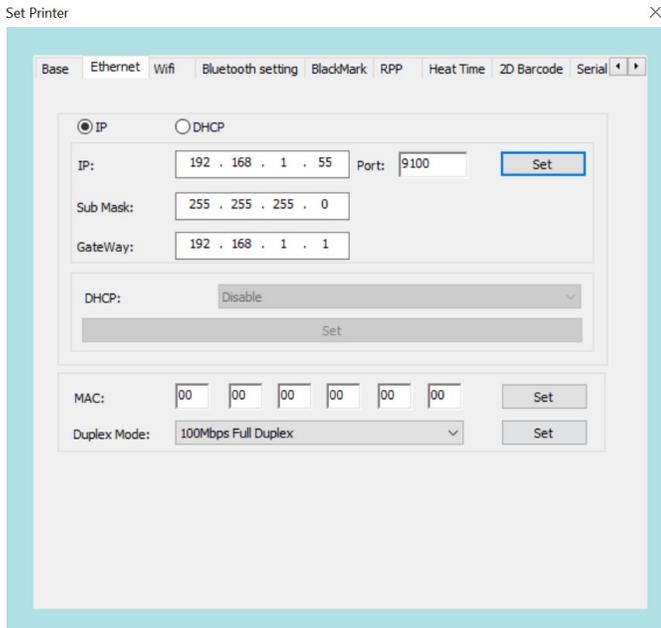

The screenshot shows the 'Set Printer' application window with the 'Ethernet' tab selected. The configuration is as follows:

- IP:** 192 . 168 . 1 . 55
- Port:** 9100
- Sub Mask:** 255 . 255 . 255 . 0
- GateWay:** 192 . 168 . 1 . 1
- DHCP:** Disable
- MAC:** 00 00 00 00 00 00
- Duplex Mode:** 100Mbps Full Duplex

Nato greš na zavihek Wifi in nastaviš kot je prikazano, samo, da vneseš prave podatke in klikneš na SET

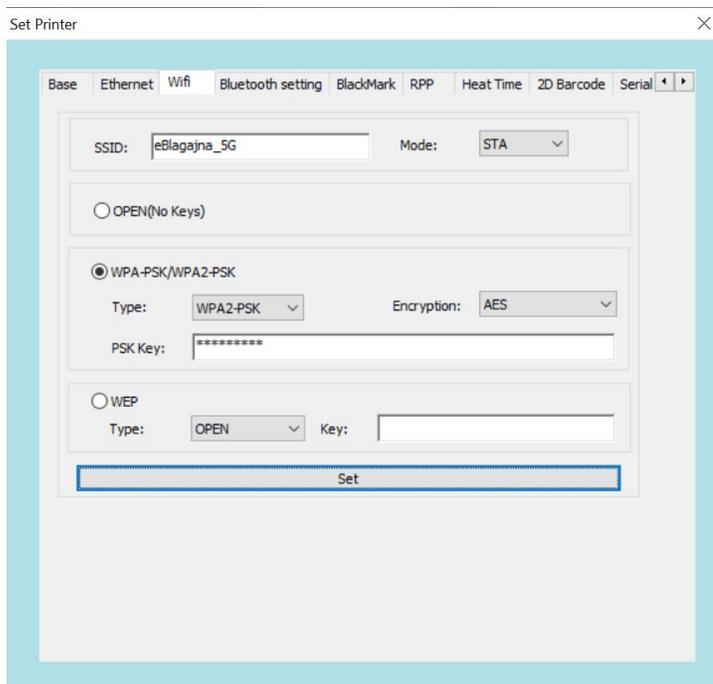

The screenshot shows the 'Set Printer' application window with the 'Wifi' tab selected. The configuration is as follows:

- SSID:** eBlagajna\_5G
- Mode:** STA
- Security:** WPA-PSK/WPA2-PSK (selected)
- Type:** WPA2-PSK
- Encryption:** AES
- PSK Key:** [Redacted]
- WEP:** Not selected

Jaz testiram tako, da imam ping nastavljen na ta tiskalnik in ko je ga začne pingati, potem mora delati.

Sam tiskalnik je generični in ima port IP naslov (to pa že znate).